

USER INSTRUCTIONS

For proper and safe operation of household appliances

INDUCTION COOKTOP (KITCHEN)

1. **Power On/Off:** Turn on the cooktop by pressing the power button. To turn it off, press and hold the same button.
2. **Temperature Adjustment:** Use the "+" or "-" buttons to adjust the temperature according to the desired cooking type.
3. **Cooking Zone Selection:** Select the desired cooking zone by touching the corresponding buttons to activate it.
4. **Safety Lock:** Press and hold the lock button to prevent accidental changes to the settings.
5. **Automatic Shut-off:** The cooktop will turn off automatically after a period of inactivity or if it does not detect a suitable cookware.
6. **Maintenance:** Clean with a soft cloth and avoid abrasive products.
7. **Recommended Cookware:** Use induction-compatible (ferrous) cookware.

RANGE HOOD (KITCHEN)

1. **Power On:** Touch the power button on the control panel to activate the hood.
2. **Speed Adjustment:** Select the extraction speed by touching the corresponding icons (low, medium, or high) as needed.
3. **Lighting:** Activate the lights by touching the lamp icon to illuminate the cooking area.
4. **Continuous Use:** Keep the hood on during cooking and for a few minutes afterward to remove odors.
5. **Power Off:** Touch the power button to turn off the hood when finished.

OVEN

1. **Power On:** Turn the function selector and set the desired temperature.
2. **Function Selection:** Choose between baking, grilling, or combined functions according to your cooking needs.
3. **Timer:** Set the timer to define the cooking time.
4. **Start:** Press the start button to begin cooking.
5. **Power Off:** The oven will turn off automatically at the end of the set time or can be stopped manually.
6. **Maintenance:** Clean the oven regularly with a soft cloth and avoid abrasive products.

DISHWASHER

1. **Power On:** Press the power button to activate the dishwasher.
2. **Loading:** Place dishes and utensils correctly in the racks.
3. **Program Selection:** Choose the desired washing cycle using the control panel.
4. **Detergent:** Add detergent to the designated compartment.
5. **Start:** Press the start button to begin the cycle.
6. **End of Cycle:** The dishwasher will turn off automatically when the cycle is complete.
7. **Maintenance:** Clean the filters and door regularly for efficient operation.

WASHING MACHINE

1. **Power On:** Press the power button to activate the washing machine.
2. **Program Selection:** Turn the dial to select the wash cycle according to the type of laundry.
3. **Detergent Loading:** Add detergent to the appropriate compartment (laundry detergent, fabric softener, etc.).
4. **Start Wash:** Press the start/pause button to begin the cycle.
5. **Additional Options:** Select functions such as spin speed or temperature according to your needs.

6. **End of Cycle:** The washing machine will turn off automatically after the wash cycle. Open the door to remove the laundry.
7. **Maintenance:** Clean the filter regularly and check the hoses to prevent blockages.

DRYER

1. **Power On:** Turn the selector to choose the program and press the start button.
2. **Loading:** Place the laundry properly inside the drum without overloading.
3. **Program Selection:** Choose the cycle according to the type of fabric (delicate, cotton, etc.).
4. **Maintenance:**
 - Lint Filter: Clean the lint filter after each use.
 - Water Tank: Empty the water tank after each cycle.
 - Condenser: Clean the condenser every 2-3 months.
5. **Power Off:** The dryer will turn off at the end of the cycle.